


# Cleaning Cards For Magocard Printer Models

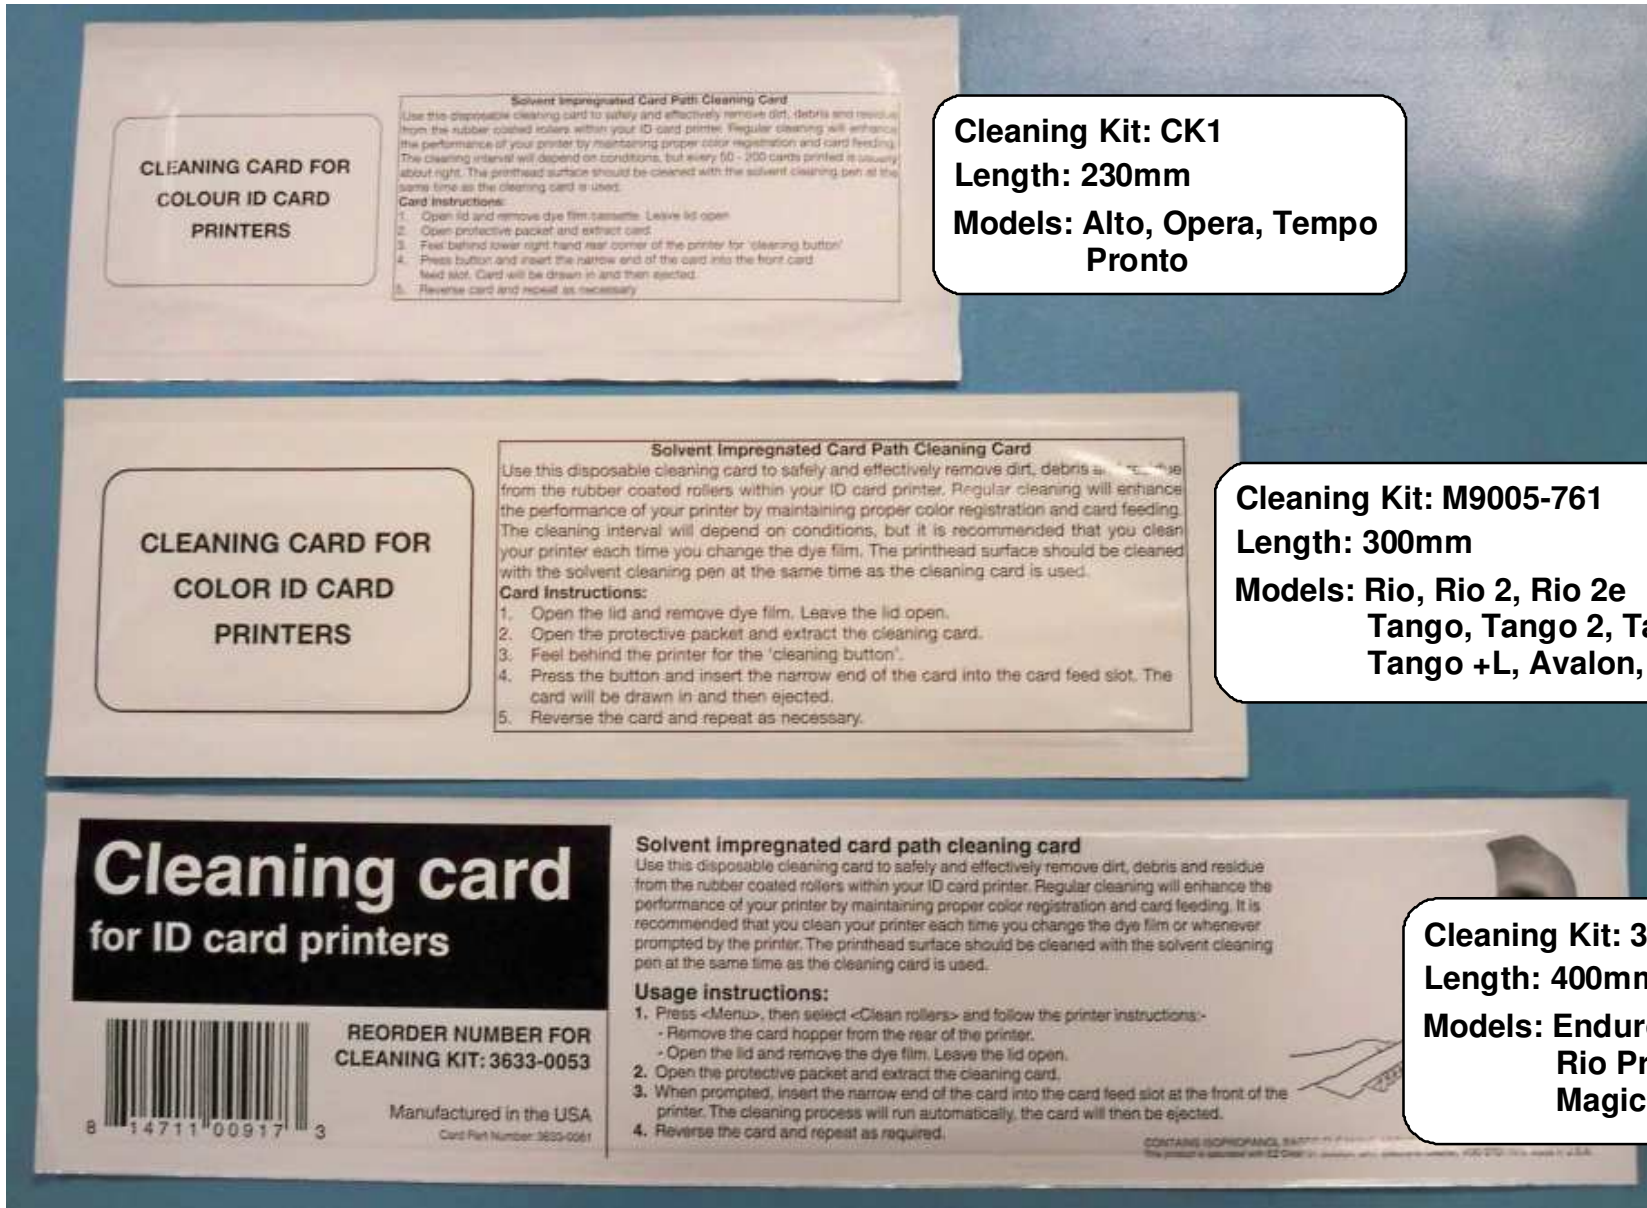

**CLEANING CARD FOR  
COLOUR ID CARD  
PRINTERS**

**Solvent Impregnated Card Path Cleaning Card**  
Use this disposable cleaning card to safely and effectively remove dirt, debris and residue from the rubber coated rollers within your ID card printer. Regular cleaning will enhance the performance of your printer by maintaining proper color registration and card feeding. The cleaning interval will depend on conditions, but every 50 - 200 cards printed is usually about right. The printhead surface should be cleaned with the solvent cleaning pen at the same time as the cleaning card is used.  
**Card Instructions:**  
1. Open lid and remove dye film cassette. Leave lid open.  
2. Open protective packet and extract card.  
3. Feel behind lower right hand rear corner of the printer for 'cleaning button'.  
4. Press button and insert the narrow end of the card into the front card feed slot. Card will be drawn in and then ejected.  
5. Reverse card and repeat as necessary.

**Cleaning Kit: CK1  
Length: 230mm  
Models: Alto, Opera, Tempo  
Pronto**

**CLEANING CARD FOR  
COLOR ID CARD  
PRINTERS**

**Solvent Impregnated Card Path Cleaning Card**  
Use this disposable cleaning card to safely and effectively remove dirt, debris and residue from the rubber coated rollers within your ID card printer. Regular cleaning will enhance the performance of your printer by maintaining proper color registration and card feeding. The cleaning interval will depend on conditions, but it is recommended that you clean your printer each time you change the dye film. The printhead surface should be cleaned with the solvent cleaning pen at the same time as the cleaning card is used.  
**Card Instructions:**  
1. Open the lid and remove dye film. Leave the lid open.  
2. Open the protective packet and extract the cleaning card.  
3. Feel behind the printer for the 'cleaning button'.  
4. Press the button and insert the narrow end of the card into the card feed slot. The card will be drawn in and then ejected.  
5. Reverse the card and repeat as necessary.

**Cleaning Kit: M9005-761  
Length: 300mm  
Models: Rio, Rio 2, Rio 2e  
Tango, Tango 2, Tango 2e  
Tango +L, Avalon, Avalon Duo**

**Cleaning card  
for ID card printers**

**Solvent impregnated card path cleaning card**  
Use this disposable cleaning card to safely and effectively remove dirt, debris and residue from the rubber coated rollers within your ID card printer. Regular cleaning will enhance the performance of your printer by maintaining proper color registration and card feeding. It is recommended that you clean your printer each time you change the dye film or whenever prompted by the printer. The printhead surface should be cleaned with the solvent cleaning pen at the same time as the cleaning card is used.

- Usage instructions:**
1. Press <Menu>, then select <Clean rollers> and follow the printer instructions:
    - Remove the card hopper from the rear of the printer.
    - Open the lid and remove the dye film. Leave the lid open.
  2. Open the protective packet and extract the cleaning card.
  3. When prompted, insert the narrow end of the card into the card feed slot at the front of the printer. The cleaning process will run automatically, the card will then be ejected.
  4. Reverse the card and repeat as required.

**Cleaning Kit: 3633-0053  
Length: 400mm  
Models: Enduro, Enduro+, Enduro 3e  
Rio Pro, Rio Pro 360  
Magocard 600**

REORDER NUMBER FOR  
CLEANING KIT: 3633-0053

Manufactured in the USA  
Card Part Number: 3633-0061



CONTAINS ISOPROPANOL SOLUTION  
The product is supplied with CE mark in accordance with the CE mark requirements, EN 12103-10, made in U.S.A.